



Lifting columns THG



Compact design



Robust



Standards EN/IEC 60601-1 UL 60601-1



THG

Telemag lifting column

Benefits

- · Compact design
- Robust

Standards

- EN/IEC 60601-1
- UL 60601-1



Technical data

	Unit	THG 10/11-BA	THG 10/11-CA	THG 10/11-BD	THG 10/11-CD
Rated push load	N	2 000	1 000	2 000	1 000
Rated pull load	N	0	0	0	0
Bending load	Nm	up to 250 1)	up to 120 1)	up to 1 000 1)	up to 450 1)
Speed (full load to no load)	mm/s	5 to 7	12 to 15	5 to 7	12 to 15
Lifting column version	# of section	2-section	2-section	3-section	3-section
Stroke	mm	200 to 700	200 to 700	200 to 700	200 to 700
Retracted length	mm	S+270	S+270	S+180	S+180
Voltage	V DC	24	24	24	24
Power	W	120	120	120	120
Current	Α	5	5	5	5
Duty cycle: intermittent operation	min.	1 min./9 min	1 min./9 min	1 min./9 min	1 min./9 min
Ambient temperature	°C	+10 to +40	+10 to +40	+10 to +40	+10 to +40
Degree of protection	IP	30	30	30	30
Protection class	-	SELV	SELV	SELV	SELV
Type of control	-	electrical	electrical	electrical	electrical
Weight	kg	8 to 14	8 to 14	8 to 14	8 to 14


 $^{^{1)}}$ For details, please see bending load diagrams (\hookrightarrow page 4)

2




Dimensional drawing

2-section

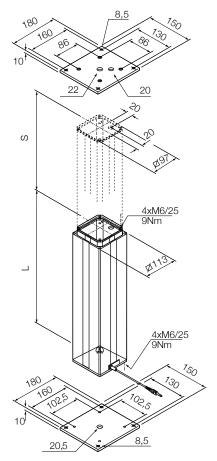

3-section

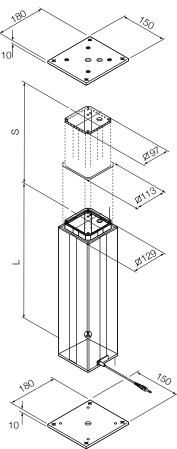


Note: mounting plates are not included. To be ordered separately.

Legend:

S = stroke


L = retracted length

Connection diagram 1)

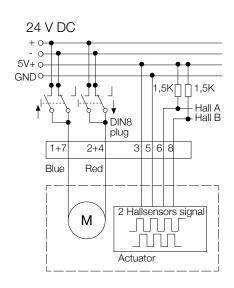

 $^{^{\}mbox{\tiny 1)}}$ Only valid with THG11. THG10 must be operated by a BCU, SCU or VCU control unit.

Suitable control units and accessories

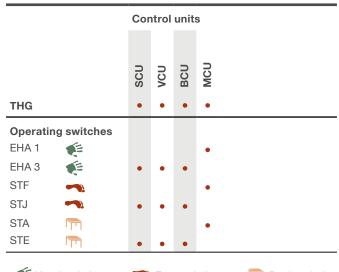



Performance diagrams

Speed-load diagram


Speed (mm/s)

16 12 8 4

1 000


1 500

Current-load diagram

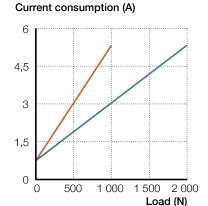

Safety factor load conditions

Safety factor (screw buckling)

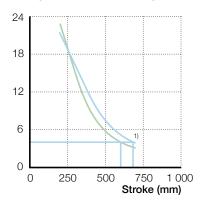

1) Safety factor = 4

THG...B.

500

THG...C.

2 000


Load (N)

B/Tr 15x5

— C/Tr 12,5x5


Bending load diagrams

Bending load diagram THG...BD Load [N]

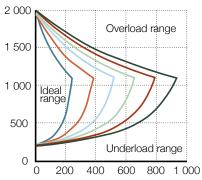


Load distance from center of column (mm)

Bending load diagram THG...CD Load [N]

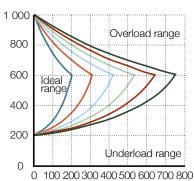

Load distance from center of column (mm)

Bending load diagram THG...BA/CA Load [N]

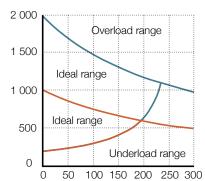

Load distance from center of column (mm)

Stroke: — 200 **—** 300 400 - 500 **-** 600 **—** 700

- THG...BA

- THG...CA




Accessories

	Designation	Order number	
Top mounting plate for 2× tube set	SPL-264265	0125688	
Bottom mounting plate for 2× tube set	SMT-264363	0124814	
Top mounting plate for 3× tube set	SPL-264265	0125688	
Bottom mounting plate for 3× tube set	SPL-264237	0125622	
Screw M6x30 (4/plate) for mounting plate	ZBE-510709	0125560	

Ordering key



Options shown in red are only available on request. Contact Ewellix for more information on minimum quantities and additional cost.

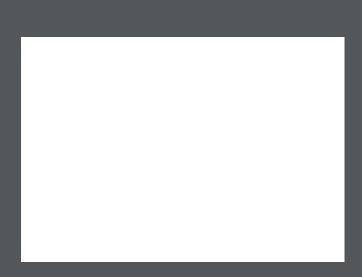

ewellix.com

© Ewellix

All contents of this publication are the property of Ewellix, and may not be reproduced or given to third parties (even extracts) without permission. Although great care has been taken in the production of this catalog, Ewellix does not take any responsibility for damage or other loss resulting from omissions or typographical errors. The photo may differ slightly in appearance from the actual product. Due to continuous improvements being made in our products, the product's appearance and specifications are subject to change without notice.